

### LOADING SCHEME : CENTRE OF GRAVITY

The centre of gravity (COG) of the load must be within the "grey" area as indicated for preventing overload.

